


Page 3

Section - 3

Q.2) Define column head and drop

Ans) Drop Panel is directly attached with slab and column head is enlarged portion of column that supports the drop panel. As in first image you can see drop and column head and second also. Enlarging portion is column head and above that is drop panel.

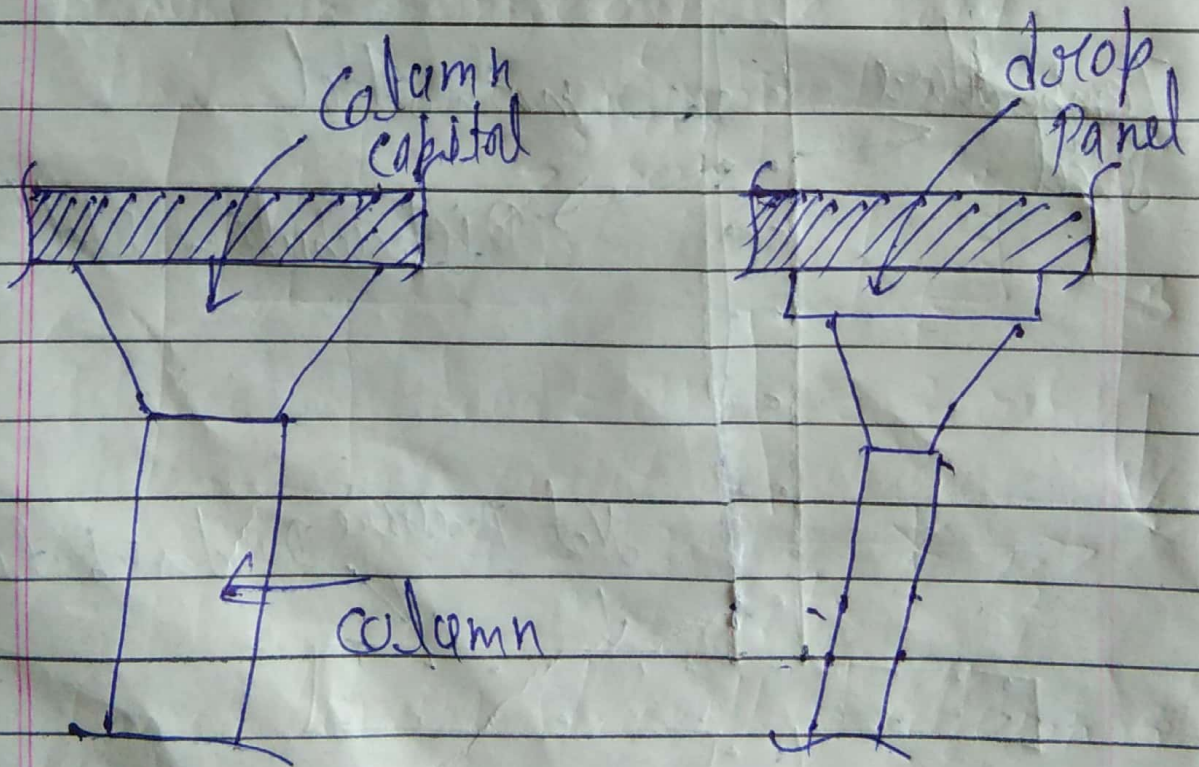

Flat slab with
column capital

flat slab with
column capital
and drop panel.