

Section - 5

Q.1) Main bar and ~~dist~~ distribution bar in slab.

Ans) Distribution bars placed on top of the main bar. Main reinforcement bars are placed in shorter direction and distribution bars placed in longer span direction. Main Reinforcement Bars are used to transfer the bending moment developed at the bottom of the slab.

